




Installation Instructions: Black Nylon Clip on MS-995 Carrier Markers

It is critical that 2 black nylon carrier clips be used on each curved carrier. The clips should be placed away from the notches toward the center of the carrier (See illustration below). The clips should not be placed on top of the notches, nor toward the outside of the notches near the outer edge of the carrier. This will allow the notches on the clip channel to prevent the carrier from sliding off the clips. If the clips are not both within the notches on the clip channel, the carrier could slide off one of the clips. If all of the leverage of the carrier is then placed upon a single clip, damage to the clip channel could ensue and cause the carrier to become disengaged with the piping system.

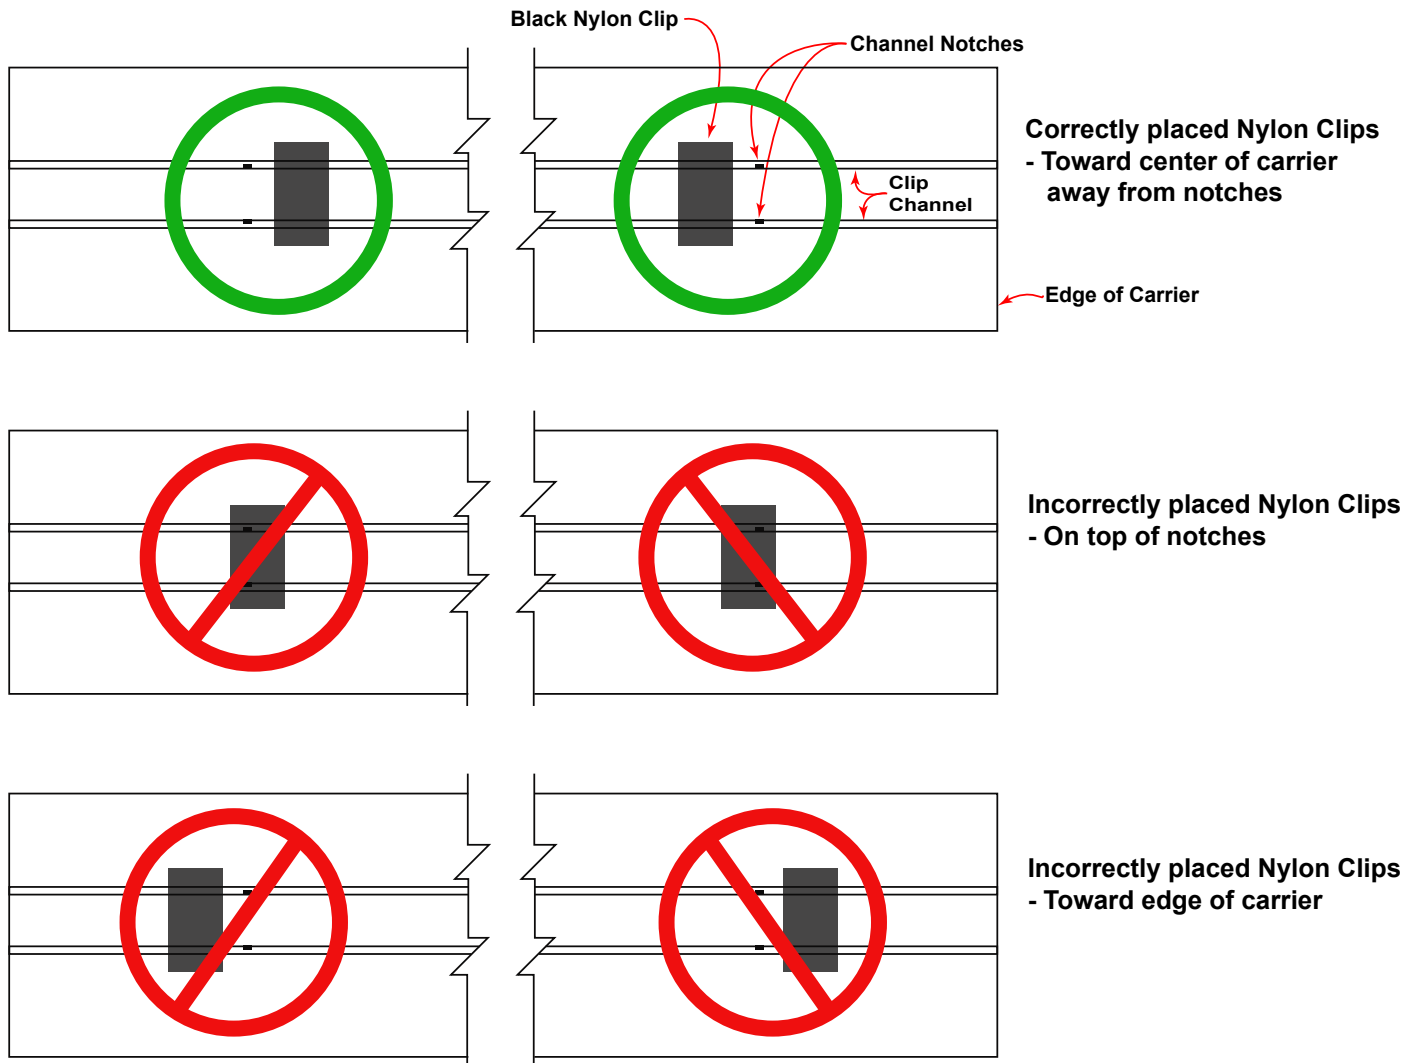

Once both black nylon carrier clip brackets have been installed properly on the back of the carrier, run an attaching strap through the slot of each nylon carrier bracket.

Secure the straps following the recommended strapping procedure for securing entire assembly to piping surface. Also, see side 2 for recommended carrier position for maximum outdoor longevity.

This carrier system has been wind tunnel tested to 150 mph sustained winds. With proper installation, no cracking was observed in any portion of the carrier or to the attaching nylon clip.



Installation Instructions: Suggested Carrier Installation Positions

Solar exposure may accelerate fading of the label on the carrier when faced directly toward the sun (**position C** below). When installing carriers on piping, we recommend installing them with the least amount of solar exposure possible. This will extend the life of the label.

When possible, face the carrier away from the sun (**positions A through B** below). These are the ideal locations for carriers. By placing the carrier as close to this range of positions as possible, direct solar exposure will be mitigated and offer the label the best longevity.

